

TERA Radon Program
TSR4M USB Radon Probe with Big Memory
Technical Specifications & Operation Manual


v.1 – 2018

Table of Contents

1	Introduction.....	2
2	Description and Utilization	3
3	Scope of Delivery	4
4	Product Specification.....	5
5	Operating Instructions.....	6
6	Basic Maintenance	6
7	EC Declaration of Conformity	7
8	Repairs.....	7
9	Warranty.....	7
10	Accessories	7
11	Alternatives	7
12	Revision History	8

 Manual also available on www.tesla.cz

COPYRIGHT NOTICE

No part of this document may be reproduced, republished, translated or digitalized in any form or by any means, without prior written permission of TESLA.

Information contained in this manual relates exclusively to the TERA system component specified on the title page. New versions and modifications may be developed without prior notice to current users. TESLA has made every attempt to provide you with complete, error-free and accurate information in this manual. TESLA is not liable for errors or omissions contained in this document, or for any damages however resulted from using or relying on any information contained herein. TESLA's liability for errors shall be strictly limited to correcting such errors and providing advisory services as described below.

Users should be familiar with operation basis of used product. If you experience any problems with your product, please contact us at:

TESLA
Rubeska 215/1
190 00 Prague 9 - Vysocany
www.tesla.cz

1 Introduction

This document describes technical specifications and user operation of the TSR4M USB Radon Probe with Big Memory.


Product was developed and manufactured in the Czech Republic. All rights reserved TESLA. Offer or delivery of products or services related to the product does not include transfer of ownership rights.

Before using the product, please read this manual carefully and understand all operating and safety precautions. Compliance with operational and safety precaution can prevent from damage to equipment or injuries to personnel. Operating and safety instructions in the document are marked as follows:

Attention! This formatted text indicates the operating and safety instructions.

The product may only be used in the specified manner and for its intended purpose. The product may be provided to third persons along with this documentation only.

2 Description and Utilization

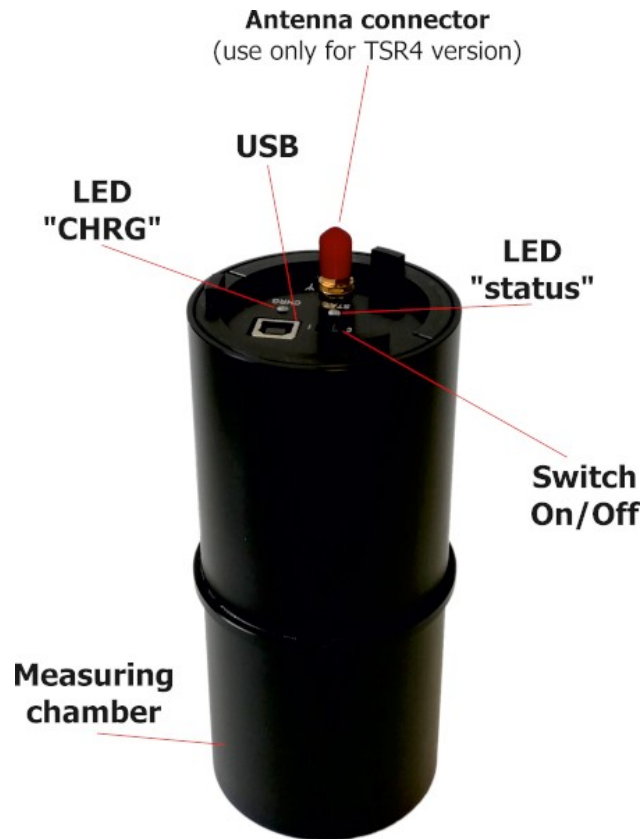

TSR4M is designed for continuous measuring of radon concentrations in buildings.

Portable probe basis is a measuring chamber with a semiconductor photodetector. Radon enters the chamber by diffusion through the input filter on the bottom of probe. The probe measures in autonomous and time continuous way. It processes results every 4-minute intervals and from this counts short-term moving average of radon concentration (1 hour moving average - average of 15 4-minute process intervals). It also counts long-term moving average of radon concentration (24 hours moving average). The probe saves time records of these radon concentration values including values of humidity and temperature within its internal memory (typically at an interval of 1 hour). Next saved value is time record of measuring energy spectrum (typically at an interval of 12 hours). The probe is random for location in measured place, but generally it is put on the bottom of the probe. Bottom of the probe cannot be covered. The probe can be switched on/off by switch. LEDs „STAT“ and „CHRG“ indicate current status of probe see 'Operation manual' below.


The resulting values can be downloaded continuously during measurement or at once at the end of measurement. Data from the radon probe is downloaded to a PC directly via USB interface. Capacity of internal memory is almost unlimited.

TSR4M Radon Probe can be operated by these ways:

- A) **Standalone probe** - Thanks to its independent battery power, portable radon measuring probe supports flexible placing options within monitored structures. Accumulator will last for more than 1 year after full charging. After switching on TSR4M immediately starts measuring and saving results into internal memory. The resulting values are downloaded after end of the measurement by B) way.



- B) **Probe connected via USB** – Using usbRADONview app and USB cable is possible to download results into PC continuously during measurement or at once at the end of measurement. usbRADONview application, drivers and user manual is free downloaded on website: <http://www.tesla.cz/>.

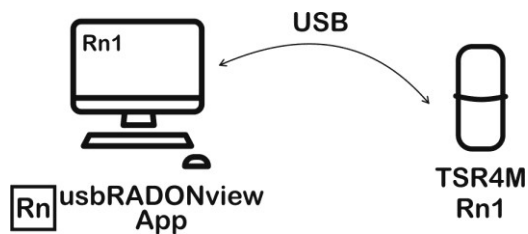

3 Scope of Delivery

- TSR4M USB Radon Probe with Big Memory
- Power adapter 230VAC/5VDC
- USB cable A-B
- Probe holder
- Operation Manual

4 Product Specification

Product	TSR4M USB Radon Probe with Big Memory
Type symbol	042 127 213 000
Average measurement sensitivity	0,25 count/hour/Bq.m-3 (method RaA+RaC; 15°C ÷ 30°C; rel. hum. 20% ÷ 40%)
Measuring range	MDA – 100 000 Bq/m ³ ; MDA = 100 Bq/m ³ per 1 hour or 20 Bq/m ³ per 24 hours
Measurement uncertainty	< 13% at 300 Bq/m ³ per 1 hour; < 3% at 300 Bq/m ³ per 24 hour
Measuring chamber capacity	0,176 dm ³
Response rate	< 30 minutes (RaA); < 3 hours (RaA + RaC)
Radon records	calculated from RaA (quicker, less sensitive) calculated form RaA + RaC (slower, more sensitive)
Measuring relative humidity range	10 – 90 %
Measuring temperature range	-20 to + 60 °C
Records saving interval	1- 255 minutes, default 1 hour
Results memory capacity	29 999 985 records; 9 927 040 spectra
Powering	internal rechargeble accumulator; charging via USB
Accu life after full charging	>1 year (also depends on operating conditions)
Current radon concentration results	short-term (0,5 hour running average from RaA) long-term (24 hours running average from RaA + RaC)
Dimension	Ø 80 x 175 mm
Operating conditions	Temperature: -10 ° C to +40 ° C Recommended relative humidity: 10% - 75% Maximum working relative humidity: 0% - 99% * Increased humidity reduces the life of a charged battery. * There must be no condensation of water in the chamber - erroneous results
Detector life	50-100 million pulses; that means at an average concentration of 1000 Bq / m ³ -> 12 years; 10,000 Bq / m ³ -> 1 year

5 Operating Instructions

Switching on and off:

The probe measures radon concentration autonomously only if the switch is in position „I“ (switch on). The switching on is signalized by LED diode „STAT“ according chart below.

If the switch is in position „0“ (switch off) the probe doesn't measure radon concentration. In switching off mode the probe only keeps running real time for correct date and time of records in case of switch it on again. By switching off the probe doesn't lose previous records of measurement. The switching on is signalized by LED diode „STAT“ according chart below.

Download data from probe over USB is possible only if switch is in position „I“ (switch on).

LED diode „STAT“:

It signalizes status radon probe according to following chart:

Color	Description
Green blink 3x	Radon probe has just been turned on.
Green blink after 5s	Radon probe measures and works correctly
Yellow blink 4x	Radon probe has just been turned off.
Green / Yellow blink after 5s	Radon probe measures but troubles are occur. – especially low capacity of accumulator. Warnings and errors are shown in PC application.
No light, No blinking	Radon probe doesn't measure or accumulator is empty or device is damaged. Charging process of accumulator is described in chapter „Basic Maintenance/ Accumulator charging“

Power supply:

According to operation method the radon probe can be supplied:

- 1) By internal accumulator for portable use – Radon probe includes internal accumulator which is able to ensure autonomous operation of probe for more than 12 months without charging. Depends on climatic condition of probe use. Accumulator is charged with USB port and provided USB cable. The USB cable is possible to connect to PC or to delivered power adapter. Status of accumulator and charging process are described in paragraph 'Basic Maintenance/Accumulator charging'
- 2) By mains power supply 230V/50Hz for stationary use – Radon probe is permanently supplied by delivered power adapter. Power adapter is connected to probe via provided USB cable. In case of blackout internal accumulator ensures UPS function.

Configuration:

Setting and configuration are realized by usbRADONview application. UsbRADONview application, drivers and user manual with detail configuration description are free downloaded on website: <http://www.tesla.cz/>.

6 Basic Maintenance

Accumulator charging:

During portable use of radon probe is essential to monitor state of internal accumulator and recharge it if necessary. If accumulator is discharged the probe automatically turns off. The probe is switched on again powering over USB port.

Current state of accumulator can be determined by two ways:

- 1) By LED diode 'STAT' - If LED starts blinking in green-yellow color it indicates that system is working incorrectly and one of main case is low voltage of accumulator. (see paragraph "Operation Manual / LED diode "STAT"").
- 2) In usbRADONview application - where you can check current accumulator voltage. Voltage should not fall below 3.5 V, in limit conditions falls below 3.3V.

Accumulator is charged via USB port using supplied USB cable. USB cable can be connected to PC or to supplied power adapter. Connect USB cable with power to USB port of probe. LED diode 'CHRG' next to USB port of probe indicates charging status according to following chart:

LED diode 'CHRG'

Color	Description
Green	Accumulator is fully charged
Yellow	Accumulator is being charged
Green - Yellow alternate blinking	Accumulator is damaged, contact Service Center
No light, No blinking	It is not connected to an external power supply or device is damaged.

Accumulator is fully charged when LED diode 'CHRG' is green. You can disconnect USB cable.

Recalibration:

We recommend regular recalibration of the device at the manufacturer within 1-2 years. Within the warranty period, one recalibration is free from the manufacturer.

7 EC Declaration of Conformity

EC Declaration of Conformity will be delivered by Tesla producer on request. If interested, please use contacts on the web www.tesla.cz.

8 Repairs

Any repairs and non basic maintenance must be performed exclusively by TESLA manufacturer.

TESLA
Rubeska 215/1
190 00 Prague 9 - Vysocany
www.tesla.cz

9 Warranty

- This product is covered by warranty of 24 months from purchase date.
- In case of warranty claim, please contact our Service Department.
- Warranty covers any defects in materials or workmanship and excludes any damage resulting from or caused by transport or handling or by any misuse.
- Warranty ceases if product has been used improperly or its seal is broken.
- In case of warranty claim, warranty period is prolonged by number of days product was undergoing warranty repairs.
- After the end of its life, product must be handled as e-waste.

10 Accessories

Radon Probe accessories are available at producer www.tesla.cz or at distributor.

Probe holder (is included in package)



11 Alternatives

TSR4M probe is easy and quick to change in manufacturer to new type of these probes:

- TSR4** – WLAN Wireless and USB Radon Probe
- TSR4S** - SIGFOX Wireless and USB Radon Probe

12 Revision History

Revision	Date	Comments
Rev.1:	31.1.2017	Initial release